

3-4. Using the interior lights

Interior lights list



- 1 Meter ring light
- 2 Engine switch light
- 3 Front overhead courtesy lights
- 4 Front interior light (→P. 265)
- 5 Front personal lights (→P. 266)
- 6 Rear interior light
- 7 Front door courtesy lighting
- 8 Inside door handle lights (if equipped)
- 9 Scuff lighting (if equipped)
- 10 Foot well lighting (if equipped)

Turning the instrument panel light control knob fully to the left disables the foot well lighting and inside door handle lights.

n Illuminated entry system

The following lights turn on when any of the doors are unlocked or opened. (The lights remain on for approximately 15 seconds when the doors are unlocked, but the lights turn off immediately if the doors are locked.)

- 1 Foot well lighting
- 1 Engine switch light
- 1 Front interior light (interior light switch is in the DOOR position)
- 1 Rear interior light (interior light switch is in the DOOR position)
- 1 Inside door handle lights
- 1 Scuff lighting

The following lights turn on for approximately 15 seconds when the engine switch is turned to the LOCK position from the ON or ACC position. (The lights turn off immediately if the engine switch is turned to the ACC or ON position.)

- 1 Engine switch light
- 1 Front interior light (interior light switch is in the DOOR position)
- 1 Rear interior light (interior light switch is in the DOOR position)
- 1 Scuff lighting

The following lights turn on when the engine switch is in the ON position. (The lights dim when the shift lever is moved out of the P position. The lights remain on for approximately 15 seconds after turning the engine switch to the LOCK position from the ON or ACC position.)

- 1 Inside door handle lights
- 1 Foot well lighting

The front overhead courtesy light turns on when the engine switch is in the ACC or ON position.

3-4. Using the interior lights

n **To prevent the battery from being discharged**

If the following lights remain ON when the door is not fully closed and the interior light switch is in the DOOR position, the lights will go off automatically after 20 minutes.

- 1 Engine switch light
- 1 Front interior light
- 1 Rear interior light
- 1 Inside door handle lights
- 1 Scuff lighting
- 1 Foot well lighting

n **Customization that can be configured at Lexus dealer**

Setting (e.g. The time elapsed before lights turn off) can be changed. (Customizable features →P. 447)

Interior lights

► Front (models with an electric moon roof)




- 1 Door position ON
- 2 ON
- 3 OFF

► Front (models without an electric moon roof)



- 1 Door position ON
- 2 ON
- 3 OFF

► Rear

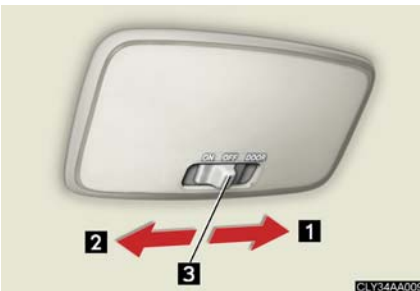

- 1 Door position ON
- 2 ON
- 3 OFF

Personal lights

► Models with an electric moon roof



1 ON/OFF

► Models without an electric moon roof



1 ON/OFF